

**KEY TO THE WIRING DIAGRAM:  
1978 and later California Specification**

Several of the components listed in this key may not be included in the specification of all models.

1 R.H. front side marker lamp	20 Direction indicator switch	41 Windscreen wiper motor	63 Starter solenoid
2 Reverse lamp switch	21 Headlamp dip switch	42 Fuse unit	64 Headlamp main beam warning lamp
3 Stop lamp switch	22 Headlamp flasher switch	43 Direction indicator warning lamp	65 Oil pressure gauge
4 R.H. front flasher lamp	23 Windscreen washer pump	44 Handbrake warning lamp	66 Hazard warning flasher unit
5 Horn push	24 Running-on control valve oil pressure switch	45 Ignition starter switch	67 Ignition key audible warning door switch
6 Horn	25 Running-on control valve	46 Switch illumination lamp	68 Cigar lighter
7 Oil pressure switch	26 Coolant temperature transmitter	47 Driver's seat belt buckle switch	69 Cigar lighter illumination lamp
8 Service interval counter for E.G.R. valve.	27 Line fuse for running-on control valve	48 Interior courtesy lamp	70 L.H. front side-marker lamp
9 Diode for E.G.R. valve service interval counter.	28 Flasher unit	49 Distributor	71 Battery
10 Diode for brake warning	29 Brake pressure failure switch	50 Alternator	72 Starter motor
11 Diode for catalytic converter service interval counter – if fitted	30 Time delay buzzer	51 Resistor – distributor	73 Heater motor
12 Service interval counter for catalytic converter – if fitted	31 Fuel gauge tank unit	52 Oil pressure warning light	74 Heater motor switch
13 R.H. rear side-marker lamp	32 'CATALYST' warning light – if fitted	53 Ignition warning lamp	75 Tachometer
14 R.H. rear flasher lamp	33 Reverse lamp	54 'FASTEN BELTS' warning lamp	76 Heater control illumination lamp
15 R.H. tail lamp	34 Combined windscreen washer and wiper switch	55 Luggage compartment lamp	77 Panel lamp switch
16 Stop lamp	35 Instrument voltage stabilizer	56 Ignition coil	78 Line fuse for hazard warning
17 R.H. parking lamp	36 Hazard warning switch	57 Panel lamp	79 Line fuse for radio*
18 Headlamp main beam	37 Handbrake switch	58 Fuel gauge	80 Radio*
19 Headlamp dip beam	38 Interior courtesy lamp door switch	59 Lighting switch	81 L.H. rear flasher lamp
	39 E.G.R. valve warning light	60 Luggage compartment lamp switch	82 L.H. tail lamp
	40 Number plate illumination lamp	61 L.H. parking lamp	83 L.H. rear side-marker lamp
		62 L.H. front flasher lamp	

\* Optional fitment circuits shown dotted

**CABLE COLOUR CODE**

N. Brown.	P. Purple.	W. White.	K. Pink.
U. Blue.	G. Green.	Y. Yellow.	O. Orange.
R. Red.	LG. Light Green.	B. Black.	S. Slate.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.

WIRING DIAGRAM: 1978 and later California Specification



